

Clamps / Position Indicators / Rotation Limiters

K4 US Clamp. Fits shafts 3/8" to 3/4".

K4-1 US Jackshaft Clamp. Fits jackshafts up to 1.05".

K4-2 US Standard Clamp. Fits shafts 1/2" to 1.05".

K4-H Hex Shaft clamp. Fits hex shafts 3/8" to 5/8".

IND-AF2 Damper Position Indicator.
For damper position indication in short shaft installations.

ZDB-AF2 US US Angle of Rotation Limiter for AF/NF actuators. Includes IND-AF2.

KH-AFV V-Bolt Kit allows for direct coupling with KH-LF.
Contains V-Bolt and 2 nuts.



Shaft Adaptors / Extensions

AV8-25 Shaft Extension. For damper operating shafts.
Approx. 6-5/8" [170 mm] extension for shafts
1/4" to 3/4" [6 to 20 mm].



The shaft adaptors listed below may be used with AF/NF actuators.
For more information see page 410.

ZG-JSA-1 ZG-JSA-2 ZG-JSA-3


Non-Direct Mounting

ZG-AF US Crank Arm Adaptor Kit
For more information see page 402.

ZG-AF108 Crank Arm Adaptor Kit
For more information see page 398.

KH-AF Crank Arm
Fits round shafts up to 3/4".

KH-AF-1 US Crank Arm for Jackshaft Applications
Fits round shafts up to 1.05".

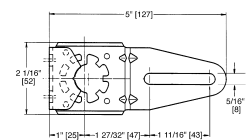

Mounting Brackets

The mounting brackets listed below may be used with AF/NF actuators.
For more information see pages 395, 398, 400 and 405.

ZG-100 ZG-101 ZG-102 ZG-106 ZG-107 ZG-108

Housings

The housings listed below may be used with AF/NF actuators.
For more information see pages 411 to 415.

ZS-100 ZS-150 ZS-260 ZS-300

Miscellaneous

AF-P Anti-Rotation T-Bracket for AF/NF.

M40024 - 05/10 - Subject to change. © Belimo Aircontrols (USA), Inc.